

If have seen that a lot of English speaking people have trouble with their Visionnet 8000S
So i have taken the liberty to write this English manual to help you all.

If you want to be able to change servers this is the way to work :
It also helps you when your Visionnet has locked up after uploading wrong software
or cutting the power while the receiver was not finished uploading your software.

1.Go to the LUXSAT home site /firmware/visionnet and download Box loader and the file
(Visionnet 8000S Free Server Choice / m1.21)

Very important !!! Let the visionnet do its work and wait every time you upload
a file, wait until the display says (GOOD)

2.install box loader and connect with a zero modem cable to your Visionnet.

1. if possible save your channel list
2. Update Boot loader with the file 1.0 special
3. Update Boot loader with the file 1.18 server choice
4. Update Boot loader with the file 1.21 or latest version for example 1.70
Put your channel list back or scan channels again
- 5 Go to menu/options/system information
There you will see at the bottom FFFF-0000-0000000000000000
- 6 The first to FF we must change because this is the server number.
Press the info button and a window opens where you can type the
new server number ; for example 21 or 33
exit menu and make a reboot with the switch on the back of the receiver
wait until you see the number 1 in your display after the boot(can take a few
seconds)
- 7 Go to menu/installations/network setup- and change network setup
to auto detect and press apply. The Visionnet will now auto reboot and your ready to
go
- 8 To be sure after boot press fn on the remote and press ok on the information
tab what the status is. If you see successful then your connected to the server , also
you see at the bottom the server ID starting with the 2 numbers you typed in.

What to do if you want to change server again

- 1 go to menu/installations/factory default and make a backup by pressing the
yellow button and then ok. Press again ok in the next window.
The receiver will reboot now ,wait until you see the number 1 in your display
after the boot(can take a few seconds)
- 2 Go to menu/options/system information
Press the info button and a window opens where you can type the
new server number ; for example 21 or 33
exit menu and make a reboot with the switch on the back of the receiver
The receiver will reboot now ,wait until you see the number 1 in your display
after the boot(can take a few seconds)
- 3 Go to menu/installations/network setup- and change network setup
to auto detect and press apply. The Visionnet will now auto reboot and your
ready to go
- 4 To be sure after boot press fn on the remote and press ok on the information
tab what the status is. If you see successful then your connected to the server also
you see at the bottom the server ID starting with the 2 numbers you typed in.

ORIGINAL